

Proper cleaning and maintenance extends the lifetime of Fitnice® Wall.

## 1. CARE

- A good choice of the particular design and colour of Fitnice® Wall, depending on where it is to be installed, will aid in the maintenance of the product.
- Schedule wallcovering installation as the final phase of the project to avoid damaging it while other work is being done on the room. If this is not possible, be sure to protect it with a plastic sheet or cardboard.
- During construction work or painting, Fitnice® Wall should be protected, as some products such as paint or varnish can irreparably damage the wall covering.
- Do not use abrasive or sharp cleaning objects.
- Do not use solvents such as acetone.
- Stains should be removed immediately, as old stains are much more difficult to clean. Use a cleaning brush and rinse with a damp cloth.
- Cigarettes can leave irreparable burn marks.
- If any loose polyester fibres appear in the seams, cut them with scissors or a cutter. Do not burn them.
- Protect Fitnice® Wall borders with a profile if it does not cover the whole height of the wall.

## 2. CLEANING

Cleaning frequency will depend on the selected material, the place where it is installed, and user criteria.

Daily use of the product does not require any kind of special cleaning or maintenance.

To eliminate dust it is advisable to regularly use a damp cloth or a duster.

Remove dirt spots by using a flannel or wet sponge soaked in a neutral domestic detergent. Use an absorbent material to remove wet stains as much as possible. Do not spread the staining agent.

In case of special stains, proceed as follows:

- Liquid stains (coffee, coke, etc.): use a flannel or a wet sponge with water and neutral soap. Rinse with a wet sponge and dry with a dry cloth.
- Grease stains (butter, chocolate, etc.): use diluted degreaser. Rinse with a wet sponge and dry with a dry cloth.

In any case, try to avoid wetting the covering excessively.

For more information, please contact the Vertisol sales team.